
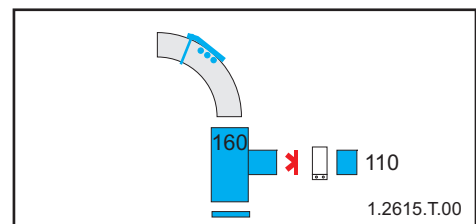


1.2615.6.00 / 1.2615.7.00 / 1.2615.T.00

Kit End Bypass for 1.0461/1.0472 Blower Top

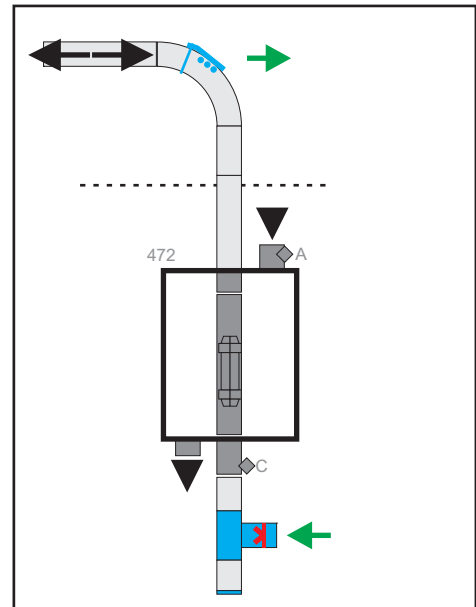

For

- There are through stations which can be approached from bottom side or from top side
- If the station is approached from top side the carrier will pass through the station. Then it will stop and will be sucked into the receive port of the station.
- For stopping the carrier under the station a bypass is needed.
- The 1.2615.T.00 is the bypass which has to be added to the station.

Installation

- There are two components.
- The upper non return valve sits on the bend over the station.
- A set of holes has to be drilled into the tube under the upper non return valve as an air exhaust.
- The lower non return valve sits under the station together with the T-Piece and the end cover.

Material: PVC, rubber, ABS

Colour: Dark grey

Delivery scope

- T-Piece
- End cover
- non return valve (blue)
- non return valve (white rubber)
- device sleeve

Options:

- Dimensions:

Item No.	Do [mm]
1.2615.6.00	110
1.2615.7.00	132
1.2615.T.00	160
1.2615.V.00	200

We reserve the right of changes!