
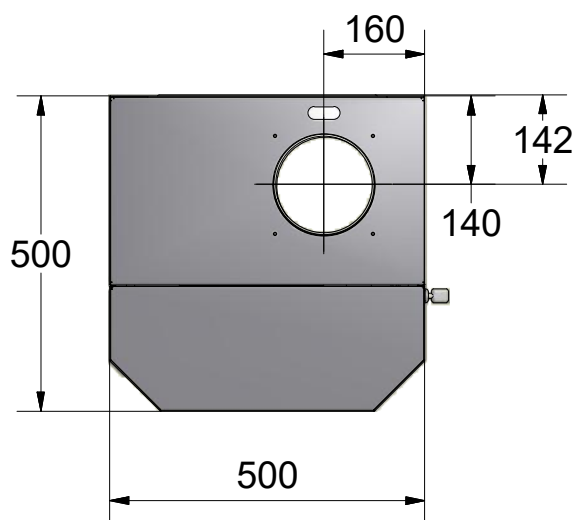
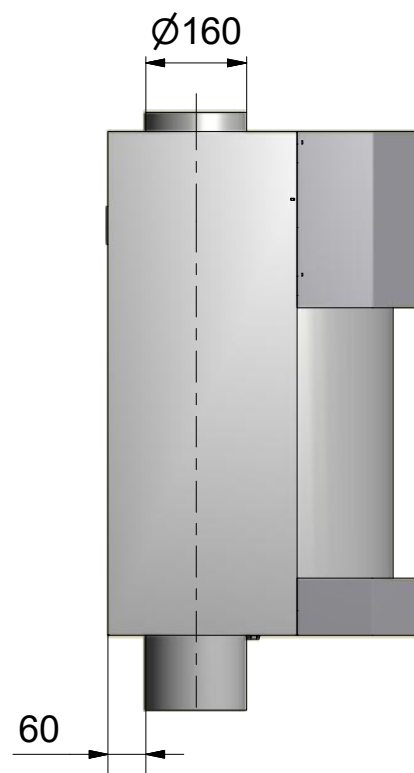


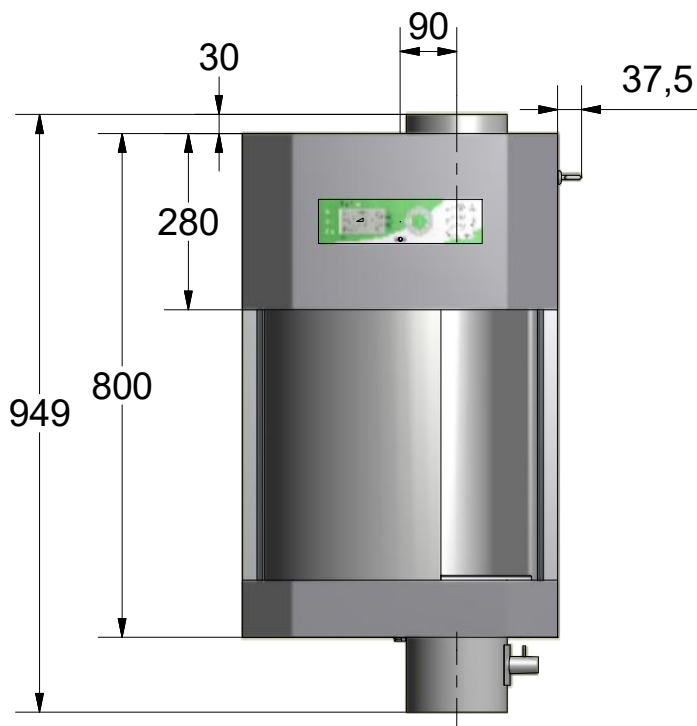

false ceiling

A

A

(2x) Ø8

Drilling pattern: rack

E.g. nylon dowel Ø8mm

Pan head chipboard screw 5mm

90

(2x)Ø12

Drilling pattern: station

E.g. dowel M10

Hangerbolt M10

635

635

1500

1615

225

310

150

377

OKFF/FFL

(4x) Ø8

Drilling pattern: small basket

E.g. nylon dowel Ø8mm

Pan head chipboard screw 5mm

260

142

A-A (1 : 25)

Ø190

Core hole drilling

(1 : 5)

310

270

8

90

1615


FFL

1.0461.T.45 Wall bracket with alternative
fixation holes: use at least two.


The examples given (for reference only) apply to a concrete wall



C-C (1 : 30)

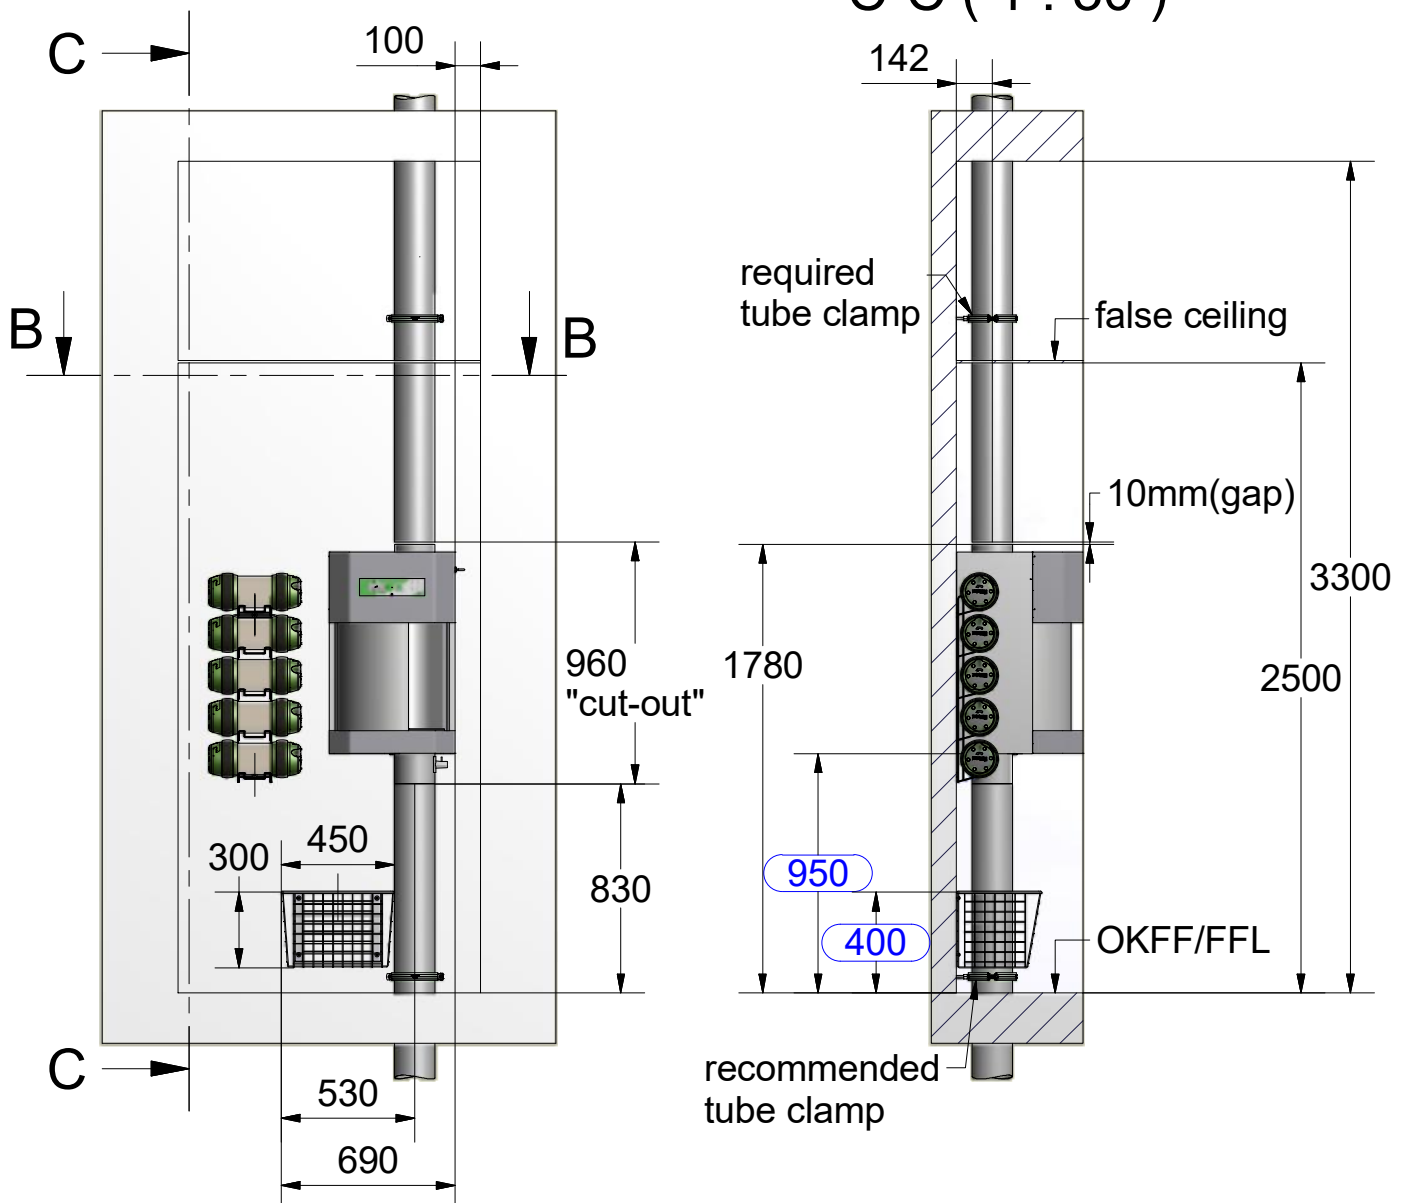



TBH 350

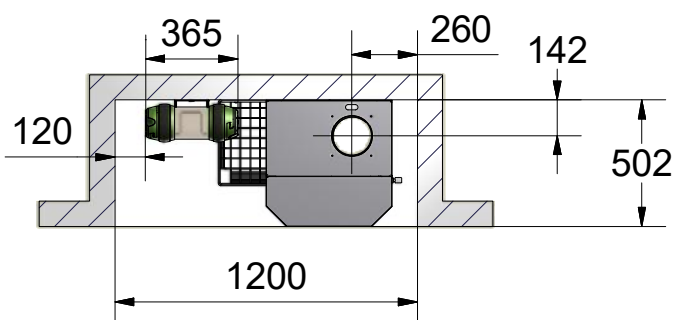


B-B (1 : 30)

Do not install any tube clamp under the station/above the basket area
It may collide with the carriers



E-E (1 : 30)



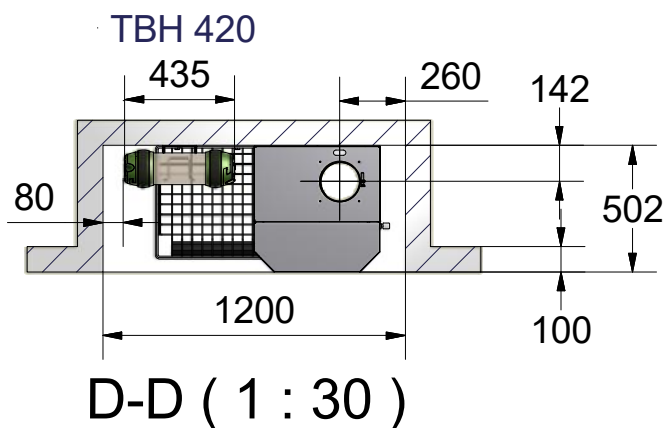
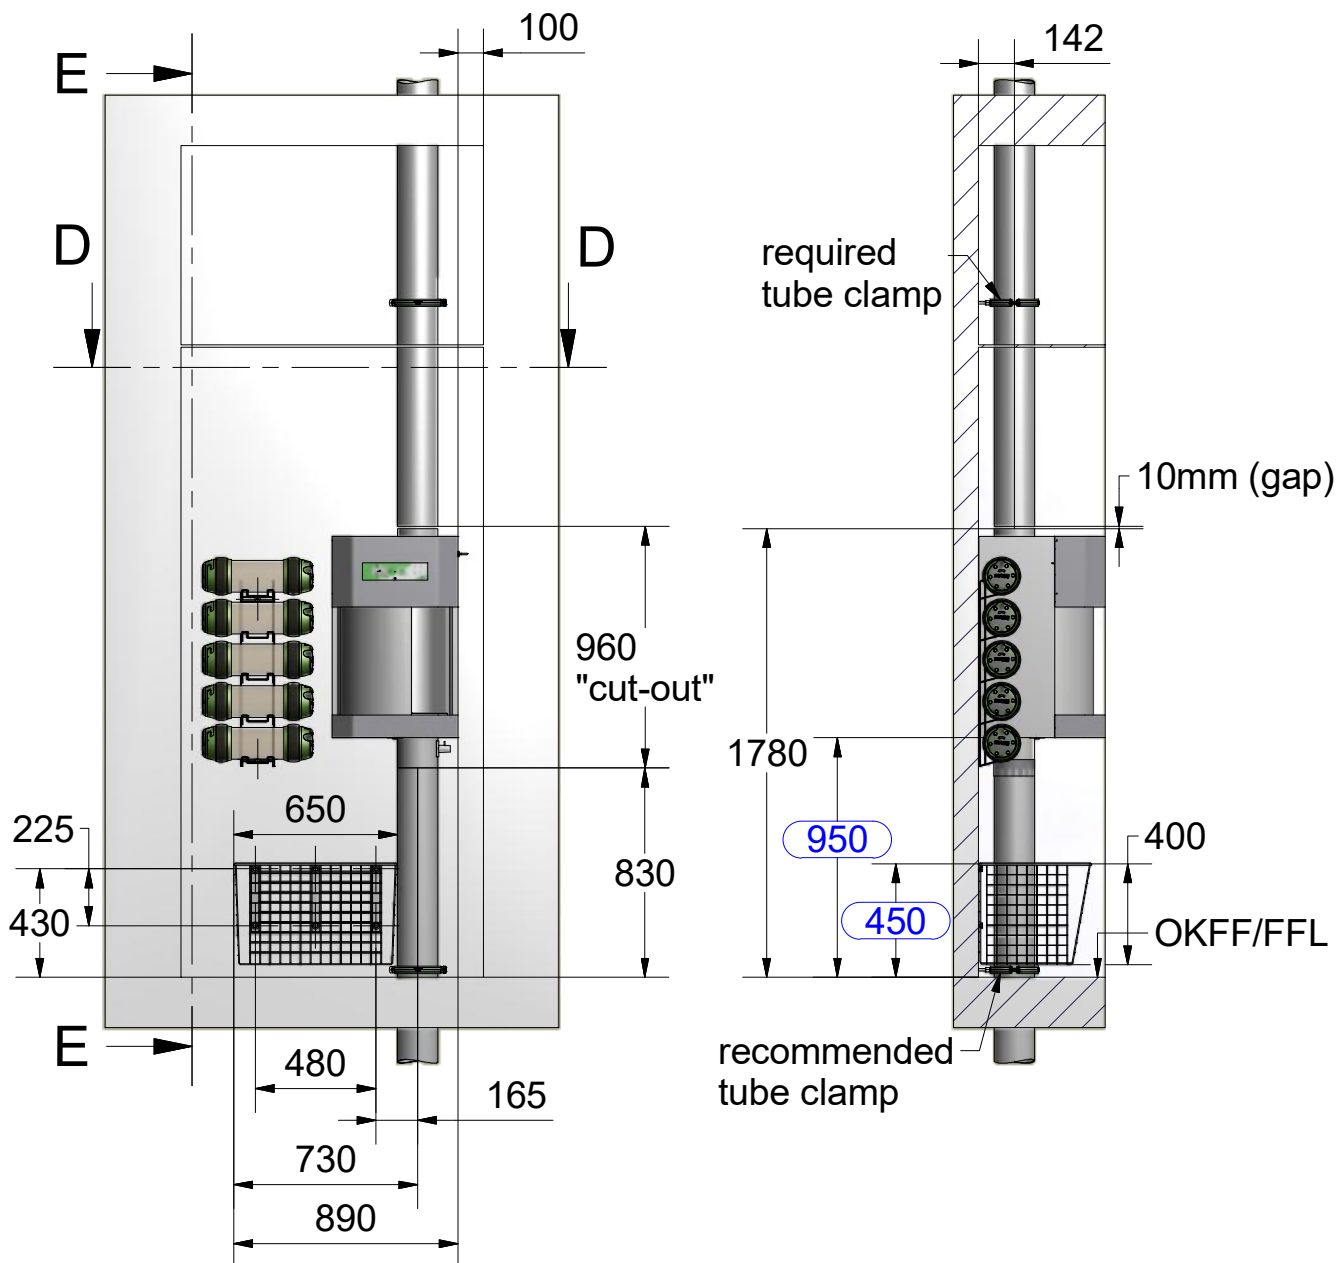



Do not install any tube clamp under the station/above the basket area
It may collide with the carriers

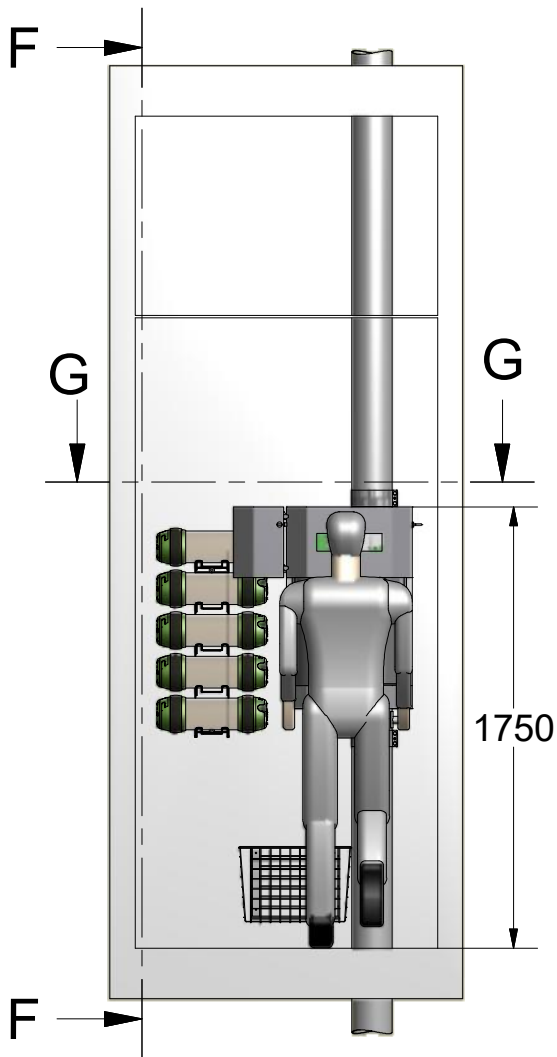



F-F (1 : 30)

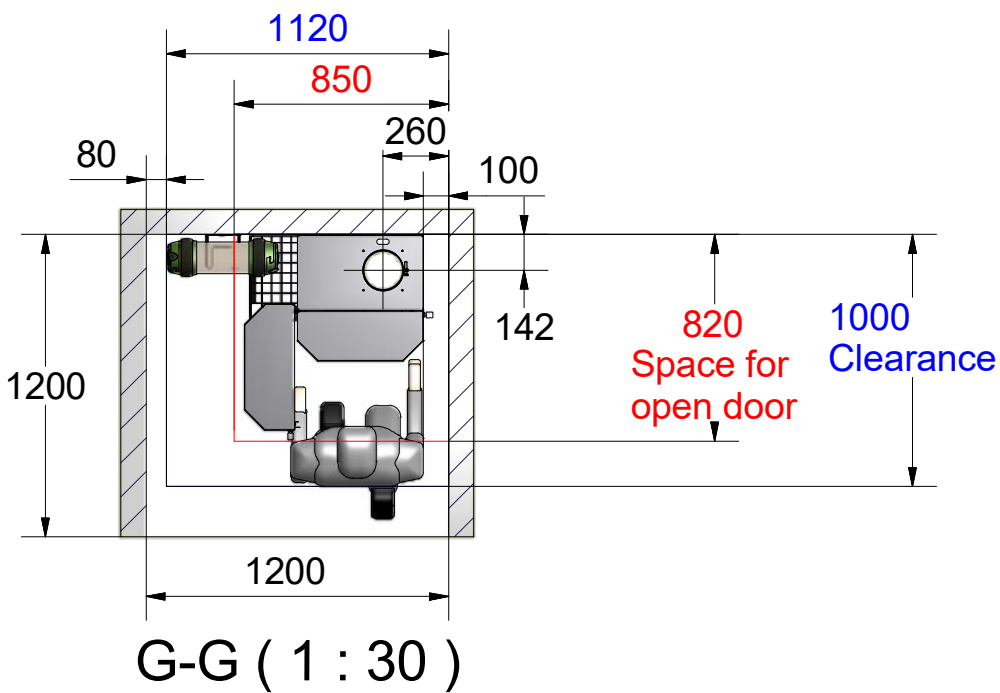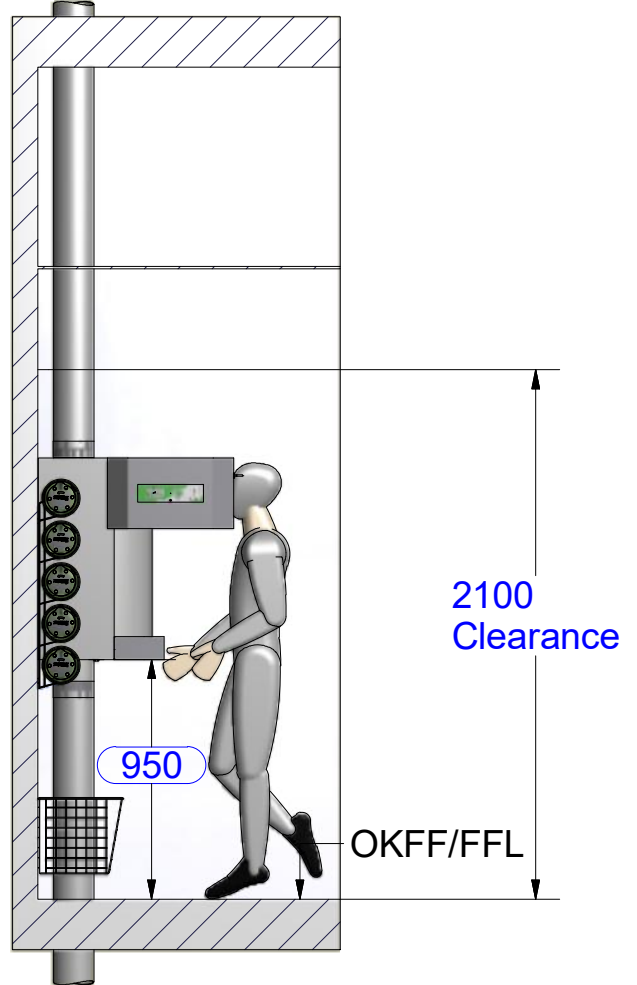

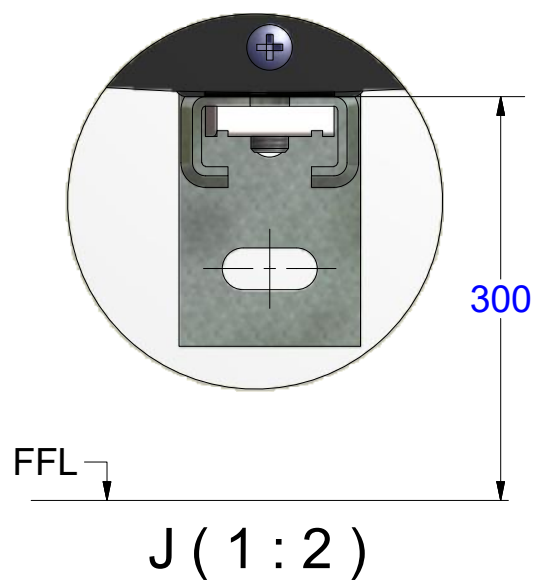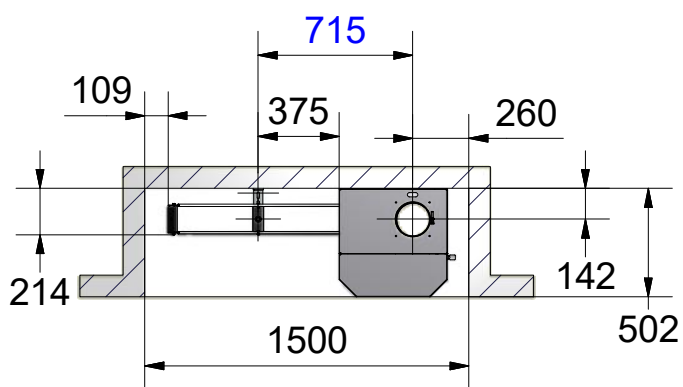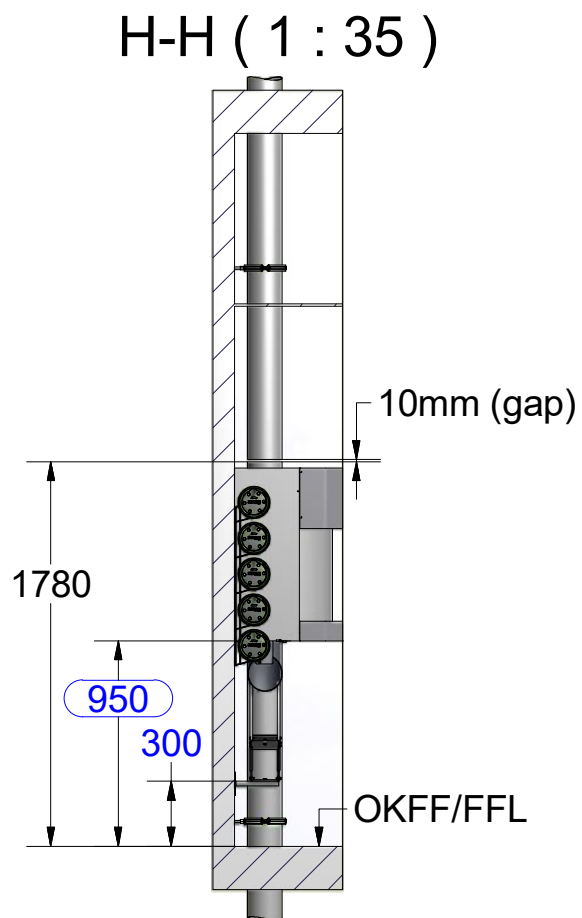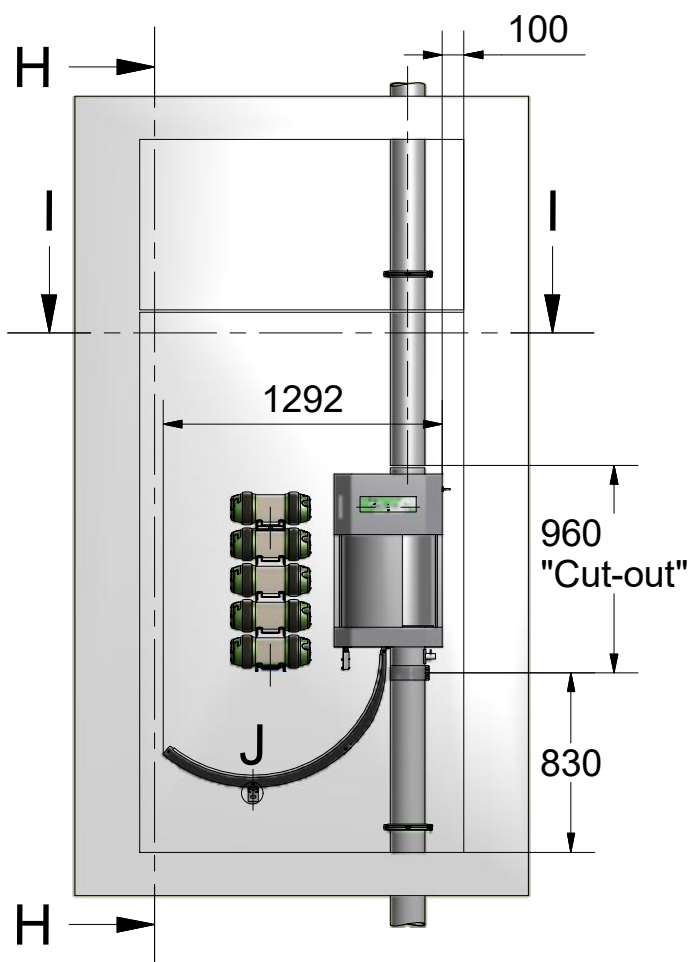


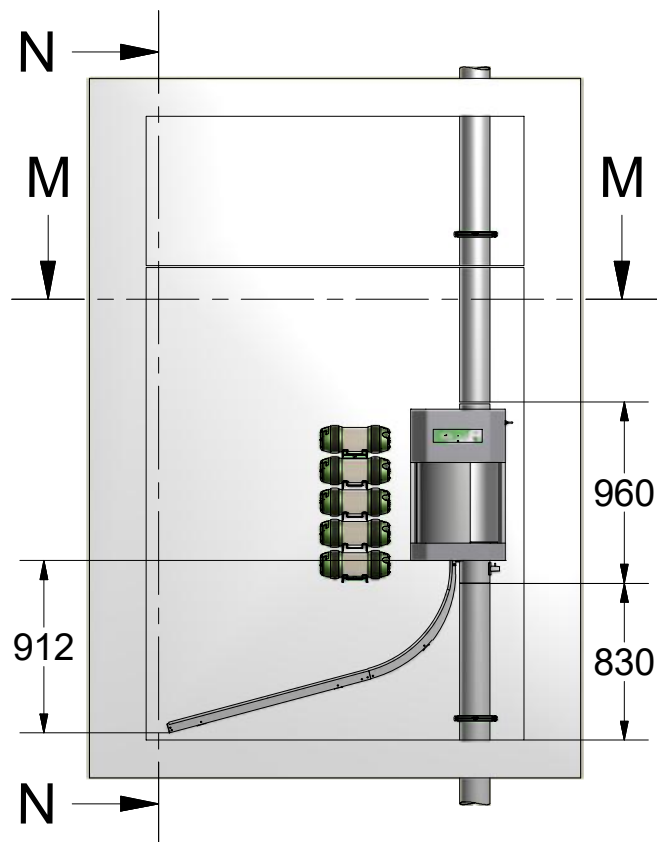


N-N (1 : 40)

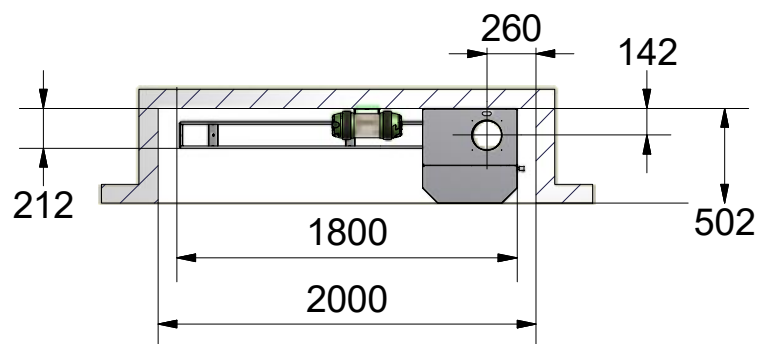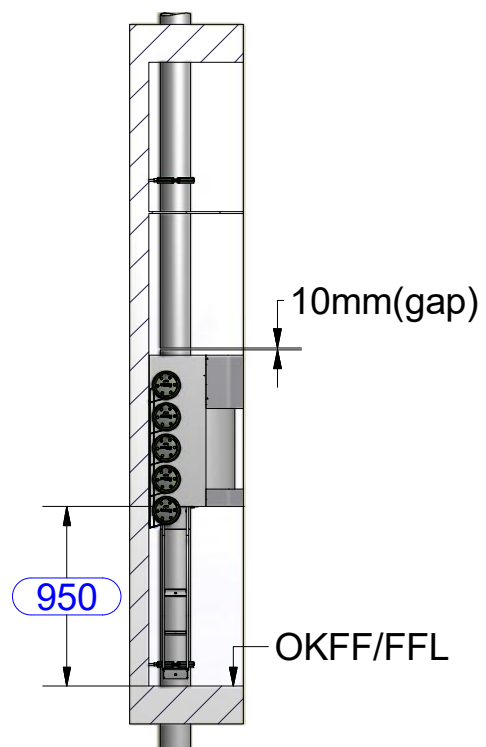

M-M (1 : 40)

O-O (1 : 30)

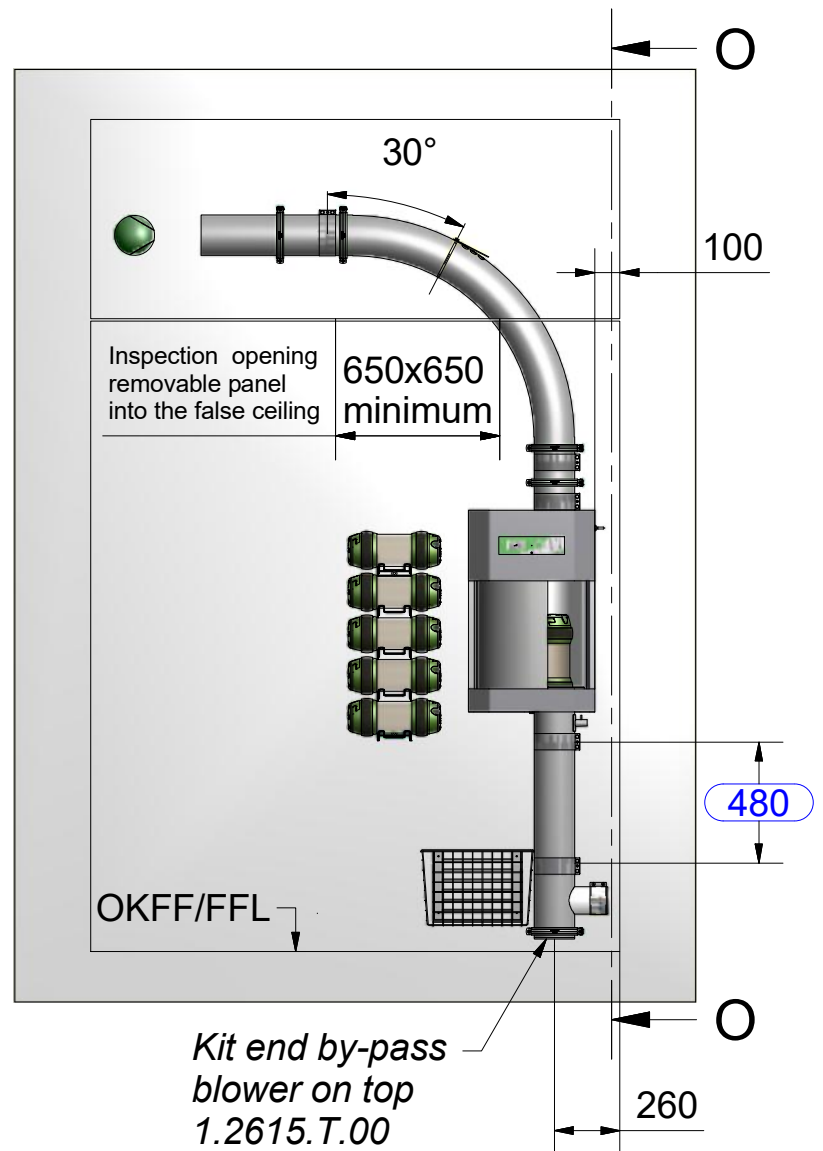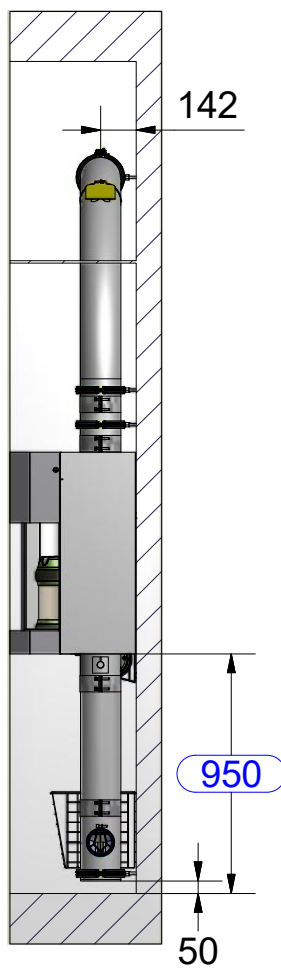

P-P (1 : 25)

Ø30 (10x) @ 360°
(2 rows)

OKFF/FFL

950

142

Kit end cover
1.0949.T.00

260

P

230

185

100

P